

MIT Television

TV
REMOTE

-  TO SHOW TV INPUT SOURCE MENU
- SCROLL  TO SELECT 

TV
REMOTE




-  TO CONTROL CHANNEL AND VOLUME

HARMAN-
KARDON

- PRESS  TO SWITCH OFF EXTERNAL SOUND

Satellite Television (DirecTV)

TV
REMOTE

-  TO SHOW TV INPUT SOURCE MENU
- SCROLL  TO SELECT 

HARMAN-
KARDON

- SCROLL  TO SELECT 

HARMAN-
KARDON

- PRESS , SCROLL  TO SELECT 

DVD

TV
REMOTE

- INPUT  TO SHOW TV INPUT SOURCE MENU

- SCROLL  TO SELECT 

HARMAN-
KARDON

- SCROLL  TO SELECT 

HARMAN-
KARDON

- PRESS , SCROLL  TO SELECT 

PlayStation 2/Nintendo Wii

TV
REMOTE

- INPUT  TO SHOW TV INPUT SOURCE MENU

- SCROLL  TO SELECT 

HARMAN-
KARDON

- SCROLL  TO SELECT 

HARMAN-
KARDON

 
- PRESS , SCROLL  TO SELECT 

External (RCA) Input

TV
REMOTE

- INPUT  TO SHOW TV INPUT SOURCE MENU
- SCROLL  TO SELECT  INPUT4

HARMAN-
KARDON



- CONNECT RCA CABLE (VIDEO, L-R AUDIO) TO VIDEO4-IN ON FRONT-PANEL 

HARMAN-
KARDON

- SCROLL  TO SELECT VIDEO4
- PRESS , SCROLL  TO SELECT ANALOG

External (VGA) Input

TV
REMOTE

- INPUT  TO SHOW TV INPUT SOURCE MENU
- SCROLL  TO SELECT  INPUT7

HARMAN-
KARDON

- CONNECT VGA, 3.5mm AUDIO CABLE TO AUXILIARY INPUTS ON FRONT CONSOLE

HARMAN-
KARDON

- SCROLL  TO SELECT PC AUDIO
- PRESS , SCROLL  TO SELECT ANALOG

External (HDMI) Input

TV
REMOTE

- INPUT  TO SHOW TV INPUT SOURCE MENU
- SCROLL  TO SELECT  INPUT4

HARMAN-
KARDON

- CONNECT HDMI CABLE (HDMI 2) TO SOURCE



HARMAN-
KARDON

- SCROLL  TO SELECT **SATELLITE**
- PRESS , SCROLL  TO SELECT **HDMI 2**

WHEN YOU ARE FINISHED...

POWER OFF

- PLEASE POWER DOWN BEFORE LEAVING:
 - DVD, HARMAN-KARDON, Wii
- **DO NOT SWITCH OFF MASTER POWER!**
 - DO NOT SWITCH OFF DirecTV


Help – Key Map and Diagnostics

Some helpful tips...

- Refer to diagrams herein for relative positioning of control buttons on TV REMOTE and HARMAN-KARDON system front control panel
- Other than the standard checks (cables, power, volume etc.), check source settings to ensure the correct mode of signal transmission is selected
- Contact ashdown-it@mit.edu for any questions, or if anything is not working properly!

SHARP LC-46D92U REMOTE CONTROL

LAYOUT

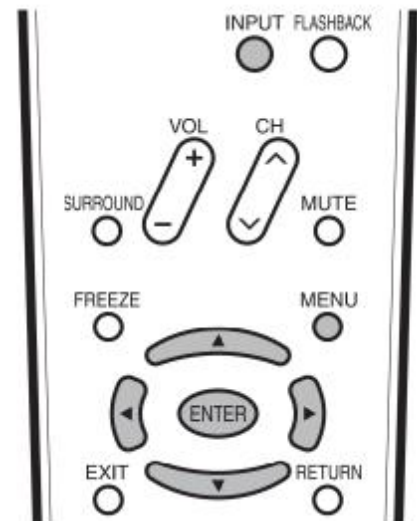

HARMAN-KARDON FRONT PANEL LAYOUT AVR 247 FRONT-PANEL CONTROLS

